

4-in1 Digital Alarm Clock Radio with Qi Wireless Charging and Bluetooth Speaker -SPK-FQC19



Overview

Snooze Clock Mode Alarm 2 Mode Pre Next





Volume +/- & Plav/Pause



Charging the Battery

 Before using, fully charge the battery using the supplied USB cable. Plug in to any USB port supplying power (Laptop, Computer, AC Charger, Car Charger, etc.). A solid red LED light indicates that the speaker is charging, when fully charged it will turn off

Power on/off

 Switch the "ON/OFF" button to power on/off the unit. Long press the "SNOOZE" button to adjust brightness of LED display.

Wireless charging

With the speaker turned on, long press the "Volume +/-" button (rotation control button), the indicated light will be flashing in red & blue then change to solid blue. Place your device (which with wireless charging function) on top to charge. Long press the "Volume +/-" button (rotation control button) again to turn off wireless charging function

Note: Please turn off wireless charging function when you are using FM radio

Bluetooth Pairing

 With the speaker turned on, it comes to clock mode with time displayed on LED. Press "Mode" button, to active the Bluetooth mode (the Bluetooth symbol will be flashing). Open the Bluetooth® settings on your phone, tablet or other Bluetooth enabled audio device, make sure Bluetooth is on and search for "SPK-FQC19". Once paired, the Bluetooth symbol will stop flashing.

Plaving Music

- Select song or plavlist on your phone, tablet or other Bluetooth enabled audio device.
- Press "Play/Pause" button (rotation control button) to start or pause the music.
- Press the "Pre" button or "Next" button to go to previous or next song.
- Revolve the "Volume +/-" button (rotation control button) to adjust the volume.

Hands-free for calling

- Pick up or hang up a call by pressing the rotation control Button.
- Long press the rotation control Button to reject.
- Press the rotation control Button twice to redial the last phone call.

Using the AUX / TF card / USB drive Inputs

- Insert a TF card / USB drive directly into the unit to play music from the TF card/USB drive via the speaker.
- Plavable Format: MP3.
- Max size of TF card / USB drive that can be connected: 32GB
- In TF card/USB drive mode, long press the"Mode"button to turn on/off shuffle Play.

FM Radio Mode

- Press "Mode" button to enter FM Radio Mode. (The device have built-in antenna. You can also plug in Micro USB Cable to extend the antenna.)
- Long press "Mode" button, the radio will search stations automatically. All stations will be stored after auto search ends.
- Press "Pre" button or "Next" button to go to previous or next station.

Note: Please disable wireless charging function when you are using FM radio

Clock

- Long Press "Clock mode" button to enter Clock Mode, the hour digital will flash. press the "Next" or "Pre" button to adjust the hour. Press the "Clock mode" again for setting the minutes. After all setting, long press the "Clock mode" button to confirm
- Short press "Clock mode" button to turn off/on the LED display.

Alarm clock 1

- Long press "Alarm 1" button to enter the alarm clock 1 setting. The hour digital will flash, press the "Next" or "Pre"button to adjust the hour. Press the"Alarm 1" button again for setting the minutes. After all setting, press the"Alarm 1" button to confirm time. Then you can choose your alarm ring. Press "Next" or "Pre" button to select the ring you like, long press "Alarm 1" button to confirm, (FM radio can be selected as alarm sound)
- When the alarm clock rings, press the "SNOOZE" button to snooze it, or press "Alarm1/2 button" on the top to stop the ring.
- Press "Alarm 1" button to cancel this Alarm clock

Alarm clock 2

- Long press "Alarm 2" button to enter the alarm clock 2 setting. The hour digital will flash, press the "Next" or "Pre"button to adjust the hour. Press the "Alarm 2" button again for setting the minutes. After all setting, press the "Alarm 2" button to confirm time. Then you can choose your alarm ring. Press "Next" or "Pre" button to select the ring you like, long press "Alarm 2" button to confirm. (FM radio can be selected as alarm sound)
- When the alarm clock rings, press the "SNOOZE" button to snooze it, or press
- "Alarm1/2 button" on the top to stop the ring.
- Press "Alarm 2" button to cancel this Alarm clock.

Alarm clock ringtone:

- Option 1-3. Built-in Speaker ringtones
- Options 4 from FM Options 5 from TF card

Sleep timer the sleep timer functionality: →OFF

LED Indica Solid blue L Red LED lig

Specificat Bluetooth

Online dist Power sou Battery rur

- Batterv ch
- Input Speaker o
- Wireless of
- Dimension

Package Contents:

1x Bluetooth speaker 1x 3.5mm Aux cable 1x Instruction Manual

. When you plaving music by Bluetooth/TF card/Aux in/FM radio, you can turn on

1.Short press the "SNOOZE" button that it will display the number 30, after 3 seconds, it will automatically turn on the timer for after 30 minutes to stop playing music and return to the clock mode

2.Short press the "SNOOZE" button can be selected: 30→60→120→180(minutes)

ator	Status of the speaker
LED light on	Wireless charging function has been activated
light flashing	Wireless charger detected other metals

tions	
protocol	V5.0
tance of Bluetooth	10m (approximate)
Irce	3.7V / 2000mAh rechargeable battery
n time	8 hours (Medium volume)
arging time	About 3 hours
	5V/2A
utput	2x5W
output	5W
IS	210*125*85mm

1x Adapter with Micro USB charging cable

Warranty Against Defects

Laser Corporation Ptv Ltd ("Laser") warrants your new product to be free from defects in materials and workmanship for 12 months, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. The benefit of this warranty is in addition to your rights under the Australian Consumer Law and to other rights and remedies of the consumer under a law in relation to the goods or services to which the warranty relates

Through a network of retailers and resellers, Laser will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty periods. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, normal wear and tear, neglect or improper storage. Please retain your receipt as proof of purchase.

How to make a product warranty claim:

Step 1: Find your receipt which proves the date of purchase. Where the date of purchase cannot be verified, your place of purchase or Laser will make an assessment based on the date of manufacture. the condition of the Laser Product and the type of defect.

Step 2a): Contact your place of purchase. They will assess the nature of the fault and refund or replace the product as per their store refund or warranty policy.

Step 2b): If your place of purchase cannot be contacted, then you can contact Laser. Customer Service with details of your defective Laser Product: Phone: (02) 9870 3340: or Email: support@laserco.com.au or online www.laserco.net/support/warranty (click on "Consumers (End Users)"). Our business address is at 1/6-8 Byfield Street, North Ryde, NSW 2113

Step 3: Laser will issue you with a Return Authorisation (RA) number within 48 hours. When requested send us the defective Product and a copy of your receipt. Laser will cover the cost of the return delivery. Step 4: Wait for us to contact you. Once we have received your defective Laser Product for inspection, we will inform you of our assessment of your claim within 7 days. When we contact you, we will firstly let you know whether you have a valid claim under this Warranty, and if so, we will inform you whether your defective Laser Product will be replaced or repaired, together with the number of days you can expect to wait to receive your replaced or repaired Laser Product.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.